

JSY-MK-163TG

Single Phase AC Bidirectional Measurement Module

1. Product description

- 1.1 Introduction
- 1.2 Functional features
- 1.3 Technical parameters

2. Application

- 2.1 Appearance and installation
- 2.2 Interface definition
- 2.3 Application instructions
- 2.4 Electric energy measurement function

3. Modbus-RTU register

4. Modbus-RTU communication protocol

5. Safety Information



1. Product introduction

1.1、 Introduction

JSY-MK-163TG is a single-phase AC **bidirectional** parameter measurement product that highly integrates measurement and digital communication technology and can complete electric energy measurement, collection and transmission. It can accurately measure single-phase AC voltage, current , power, power factor, frequency, Electrical parameters such as power , 1-way TTL level interface, completely isolated circuit, small size, simple interface, can be easily embedded into various devices that need to measure power consumption, and has excellent cost performance.

JSY-MK-163TG single mutual inductance electric energy measurement module can be widely used in energy-saving renovation , electric power, communications, railways, transportation, environmental protection, petrochemical, steel and other industries to monitor the current and power consumption of AC equipment .

1.2、 Features

- 1.2.1. Collect single-phase alternating current parameters, including voltage, current, power, power factor, frequency, electric energy and other electrical parameters.
- 1.2.2. Adopt special measurement chip, effective value measurement method, high measurement accuracy.
- 1.2.3. With 1-way TTL communication interface, compatible with 3.3V interface.
- 1.2.4. The communication protocol adopts standard Modbus-RTU, which has good compatibility and facilitates programming.
- 1.2.5. DC 3.3V power supply.
- 1.2.6. High isolation voltage, withstand voltage up to DC 3000V.
- 1.2.7. Optional different specifications, single-turn through-core PCB fixed or open transformer, convenient and easy to use.
- 1.2.8. The CT of this module has the ability to resist direct current component measurement.

1.3、 Technical Parameters

1.3.1 Single phase AC input

- 1) Voltage range: 1-300V.
- 2) Current range: 20mA-50A.
- 3) Signal processing: using special measurement chip, 24 -bit AD sampling.
- 4) Overload capability: 1.2 times the range is sustainable. instantaneous (<20mS) current is 5 times, voltage is 1.5 times the range without damage.
- 5) Input impedance: voltage channel>1 k Ω /V.

1.3.2 Communication Interface

- 1) Interface type: 1-way TTL communication interface, compatible with 5V/3.3V .
- 2) Communication protocol: Modbus-RTU protocol.

- 3) Data format: can be set by software, "n,8,1" , "e,8,1" , "o,8,1" , "n,8,2" .
- 4) Communication rate: The baud rate can be set to 1200, 2400, 4800, 9600Bps.
the default baud rate is 4800bps.

1.3.3 Measurement output data

For multiple electrical parameters such as voltage, current, power, electric energy, power factor, frequency, etc., see the Modbus data register list.

1.3.4 Measurement accuracy

Voltage , current , electricity: less than $\pm 1.0\%$. active power accuracy 1.

1.3.5 Isolation

The power supply under test and the power supply are isolated from each other.
the isolation withstand voltage is 3000VDC.

1.3.6 Power supply

- 1) DC 3.3V power supply, power consumption 8 ~ 10mA.

1.3.7 Working environment

- 1) Working temperature: $-40\sim+85^{\circ}\text{C}$.
- 2) Relative humidity: 5~95%, no condensation (at 40°C) .
- 3) Altitude: 0~3000 meters.
- 4) Environment: No explosive, corrosive gases and conductive dust, no significant shaking, vibration and impact.

1.3.8 Temperature drift: $\leq 100\text{ppm}/^{\circ}\text{C}$.

1.3.9 Installation method: PCB welding, module plane size is 45*30mm.

1.3.10 Module size : 45*30mm.

2. Application

2.1、 Appearance and installation


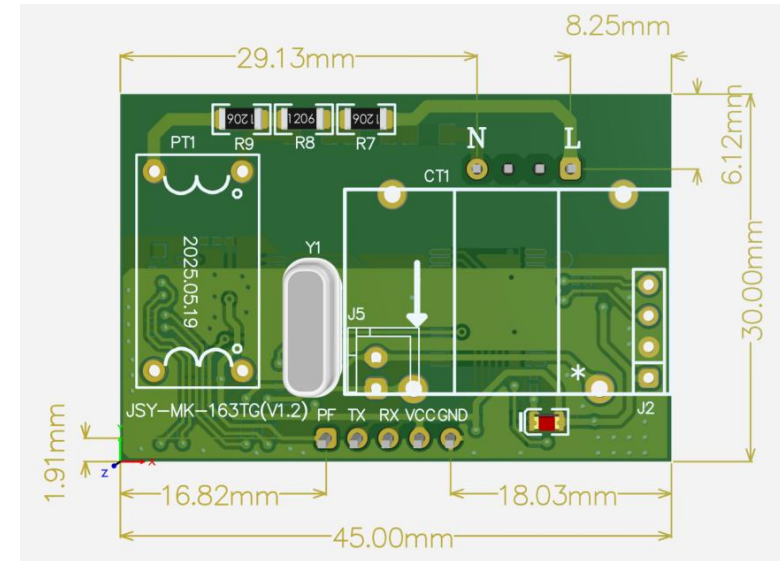


Figure 2.1 Dimensional drawing (unit: mm)

Current transformer appearance and dimensions:

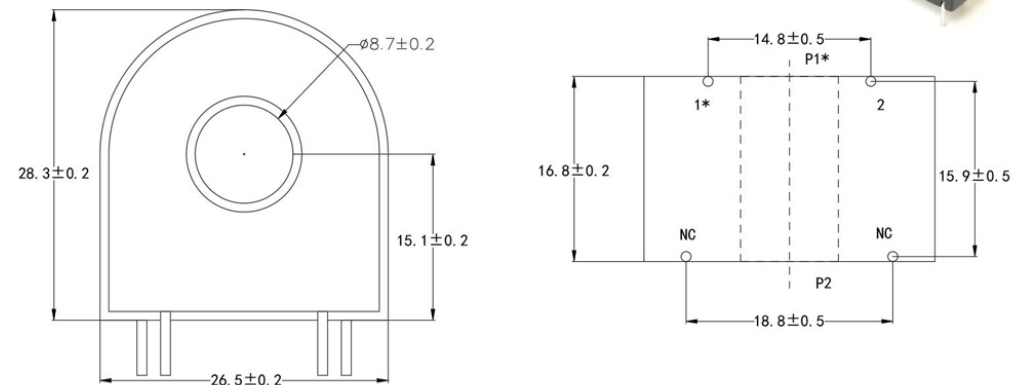


Dimensional drawing of 50A core-type current transformer

2.2、 Interface definition

2.2.1 Pin description

logo	characteristic	Function description
L	Live wire	Measured voltage live wire connection port
N	Neutral wire	Measured voltage neutral line connection port
PF	Output	Active energy verification pulse output, low level output by default, generally does not need to be connected to this pin, but the pin position must be reserved
Tx	Output	Module TTL level sending
Rx	Input	Module TTL level reception
VCC	Power supply +	Metering module power supply pin , normal application range: 3.3V
GND	Power supply -	Power ground

2.2.2 The current wire to be measured passes through the current transformer, and there is no specific direction requirement. as shown in the figure below.

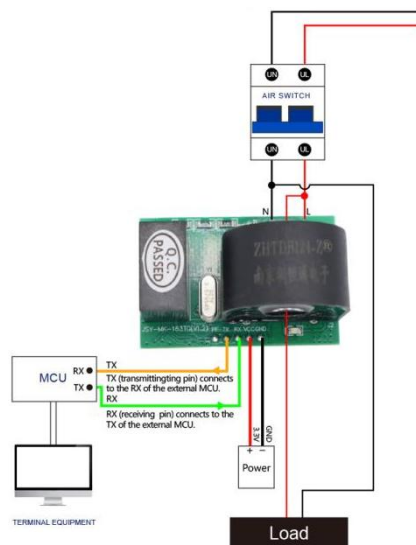

Wiring diagram

2.3、 Application Notes

Please refer to the above diagram for correct wiring according to product specifications and models. Make sure to disconnect all signal sources before wiring to avoid danger and damage to the equipment. After checking to confirm that the wiring is correct, turn on the power and test.

After the power is turned on, the "indicator light " is always on, and during communication, the "indicator light" flashes synchronously during communication data transmission.

When the products leave the factory, they are set to the default configuration: address No. 1, baud rate 4800bps, data format "n,8,1", data update rate is 1000ms, and transformation ratio is 1.

You can use the JSY-MK-163 series product testing software we provide to change the settings of product parameters and general testing of the product.

2.4、 Electric energy measurement function

Can provide single-phase voltage, current, power, power factor, frequency, active power, carbon emissions and other parameters.

The electricity data is a 4-byte unsigned number. It will not overflow for 10 consecutive years and the data will be saved when the power is turned off.

3. JSY-MK-163TG Modbus register list

Table 1: System configuration reading parameter register address and data communication table (function code 03H read, 10H write)

Serial number	Definition	Register address	read/write	Specific instructions
1	Address and baud rate	0004H	read/write	The default value is 0105H. the default address is 01H, and the default communication format is 8, N, 1,4800bps illustrate: The 8-bit high byte is the address, 1~255. 0 is the broadcast address. The high 2 bits of the low byte are the data format bits. "00" means 10 bits, no check, that is, "8, N, 1". "01" means 11 bits, even parity, that is, "8, E, 1". "10" means 11 bits, odd parity, that is, "8, O, 1". "11" means 11 bits, no parity, 2 stop bits, that is, "8, N, 2". The lower four bits of the low byte are the baud rate, 3-1200bps, 4-2400bps, 5-4800bps, 6-9600bps,

Table 2: System read-only parameter register address and communication data table (function code 03H, read-only)

Serial number	Definition	Register address	read/write	Specific instructions
1	Model 1	0000H	read	The value is 0163H
2	Model 2	0001H	read	The value is 0120H
3	Voltage range	0002H	read	The value is 250, which represents 250V
4	Current range	0003H	read	The value is 500, which represents 50A

Table 3: Measurement electrical parameter register and communication data table (function code 03H, read-only)


Serial number	Definition	Register address	read/wr ite	Data types and calculation instructions
1	Voltage	0048H	read	Unsigned number, value=DATA/100, unit V
2	Current	0049H	read	Unsigned number, value=DATA/100, unit A
3	Active power	004AH	read	Unsigned number, value=DATA, unit W
4	Positive active energy	004BH	read	Unsigned number, value = DATA/3200, unit kWh
		004CH	read	
5	Power factor	004DH	read	Unsigned number, value=DATA/1000
6	Negative active energy	004EH	read	Unsigned number, value = DATA/3200, unit kWh
		004FH	read	
7	Power direct	0050H	read	Value=0 (position) , Value=1 (negative)
8	Frequency	0051H	read	Value = DATA/100, unit Hz

4. MODBUS communication protocol

This instrument provides a serial asynchronous half-duplex RS485 communication interface, using the standard MODBUS-RTU protocol, and various data information can be transmitted on the communication line. Up to 255 network instruments can be connected to one line at the same time. Each network instrument can set its communication address. The communication connection should use a shielded twisted pair with a copper mesh, and the wire diameter should not be less than 0.5mm². When wiring, communication lines should be kept away from strong current cables or other strong electric field environments.

The MODBUS protocol adopts the master-slave response communication connection method on one communication line. First, the signal from the host computer is addressed to

a terminal device (slave) with a unique address. Then, the response signal from the terminal device is transmitted to the host in the opposite direction, that is, the signal is transmitted along a separate communication line. All communication data streams are transmitted in opposite directions (half-duplex operating mode). The MODBUS protocol only allows communication between the host (PC, PLC, etc.) and terminal devices, but does not allow data exchange between independent terminal devices. In this way, each terminal device will not occupy the communication line when they are initialized, but is limited to responding. Query signal arriving at this machine.

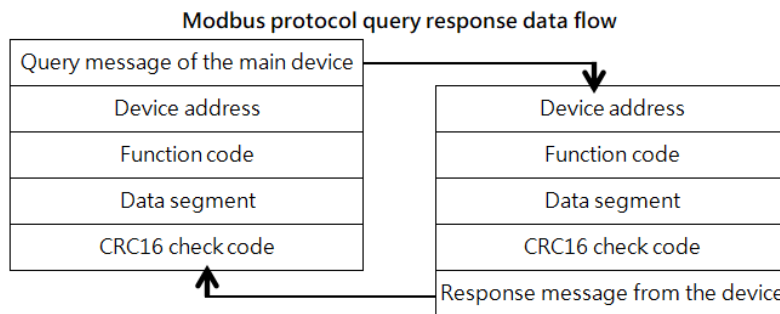

Host query: The query message frame includes device address, function code, data information code, and check code. The address code indicates the slave device to be selected. the function code tells the selected slave device what function it wants to perform. For example, function code 03 or 04 requires the slave device to read registers and return their contents. the data segment contains the requirements of the slave device. Any additional information that performs functions. The check code is used to verify the correctness of a frame of information. The slave device provides a method to verify whether the message content is correct. It uses the calibration rule of CRC16.

Slave response: If the slave device generates a normal response, the response message contains the slave address code, function code, data information code and CRC16 check code. Data information codes include data collected from the device: like register values or status. If an error occurs, we agree that the slave machine will not respond.

We specify the communication data format used in this instrument: bits per byte (1 start bit, 8 data bits, odd or even parity or no parity, 1 or 2 stop bits) .

The structure of the data frame, that is, the message format:

Device address	function code	data segment	CRC16 check code
1 byte	1 byte	N bytes	2 bytes (low byte first)

Device address: It consists of one byte. The address of each terminal device must be unique. Only the addressed terminal will respond to the corresponding query.

Function code: tells the addressed terminal what function to perform. The following table lists the function codes supported by this series of instruments and their functions.

function code	Function
03H	Read the value of one or more registers
10H	Write the value of one or more registers
01H	Read the output status of relay 1
05H	Write the output status of relay 1

Data segment: Contains the data required by the terminal to perform specific functions or the data collected when the terminal responds to queries. The content of these data may be numerical values, reference addresses or setting values.

Check code: CRC16 occupies two bytes and contains a 16-bit binary value. The CRC value is calculated by the transmitting device and then appended to the data frame. The receiving device recalculates the CRC value when receiving the data and then compares it with the value in the received CRC field. If the two values are not equal, an error occurs. mistake.

The process of generating a CRC16 is:

- (1) Preset a 16-bit register to 0FFFFH (all 1s), called CRC register.
- (2) Perform XOR operation on the 8 bits of the first byte in the data frame and the low byte in the CRC register, and store the result back into the CRC register.
- (3) Shift the CRC register one bit to the right, fill the highest bit with 0, shift out the lowest bit and detect it.
- (4) If the lowest bit is 0: repeat the third step (next shift). if the lowest bit is 1: perform an XOR operation on the CRC register and a preset fixed value (0A001H).
- (5) Repeat steps 3 and 4 until 8 shifts. In this way, a complete eight bits are processed.
- (6) Repeat steps 2 to 5 to process the next eight bits until all bytes are processed.

(7) The final value of the CRC register is the value of CRC16.

MODBUS-RTU communication protocol example:

4.1. Function code 0x03: Read multiple registers

Example: The host wants to read 2 slave register data with address 01 and start address 0048H.

Host sends: 01 03 00 48 00 02 CRC

Address function code starting address data length CRC code

Slave response: 01 03 04 12 45 56 68 CRC

Address function code returns the number of bytes Register data 1 Register data 2 CRC code

4.2. Function code 0x10: Write multiple registers

Example: The host wants to save 0000,0000 to the slave register with addresses 000C, 000D (slave address code is 0x01)

Host sends: 01 10 00 0C 00 02 04 00 00 00 00 F3 FA

Address function code starting address number of write registers byte count saved data 1 2 CRC code

Slave response: 01 10 00 0C 00 02 81 CB

Address function code starting address write register number CRC code

4.3. Description

The register in the MODBUS-RTU communication protocol refers to 16 bits (ie 2 bytes), and the high-order bit is first.

When setting parameters, be careful not to write illegal data (that is, data values that exceed the data range limit).

The error code format returned by the slave is as follows:

Address code: 1 byte

Function code: 1 byte (the highest bit is 1)

Error code: 1 byte

CRC: 2 bytes

The response returns the following error code:

81: Illegal function code, that is, the received function code module does not support it.

82: Reading or writing illegal data address, that is, the data location exceeds the readable or writable address range of the module.

83: Illegal data value, that is, the data value sent by the module received by the host exceeds the data range of the corresponding address.

4.4. Example of command analysis:

4.4.1 Read electrical parameter instructions (take the module address as 0x01 as an example):

Send data: 01 03 00 48 00 0A 45 DB (read 10 registers starting from 0048H)

Received data: 01 03 14 5F C0 01 8F 03 D5 00 00 07 C0 03 E8 00 00 01 E6 00 00 13 86 84 CB


The red part is the relevant electrical parameters, and the decomposed results are as follows:

The red data 5 F C0 corresponds to the 0048 register, which is the voltage: $0x5FC0 = 24512$, divided by 100 is 245.12 V. The data in each register is 2 bytes. The other data can be obtained according to the same calculation formula. Electric energy data is 2 registers, 4 bytes combined data.

4.4.2 Clear energy command (take module address 0x01 as an example):

Send data: 01 10 00 0C 00 02 04 00 00 00 00 F3 FA

Receive data: 01 10 00 0C 00 02 81 CB

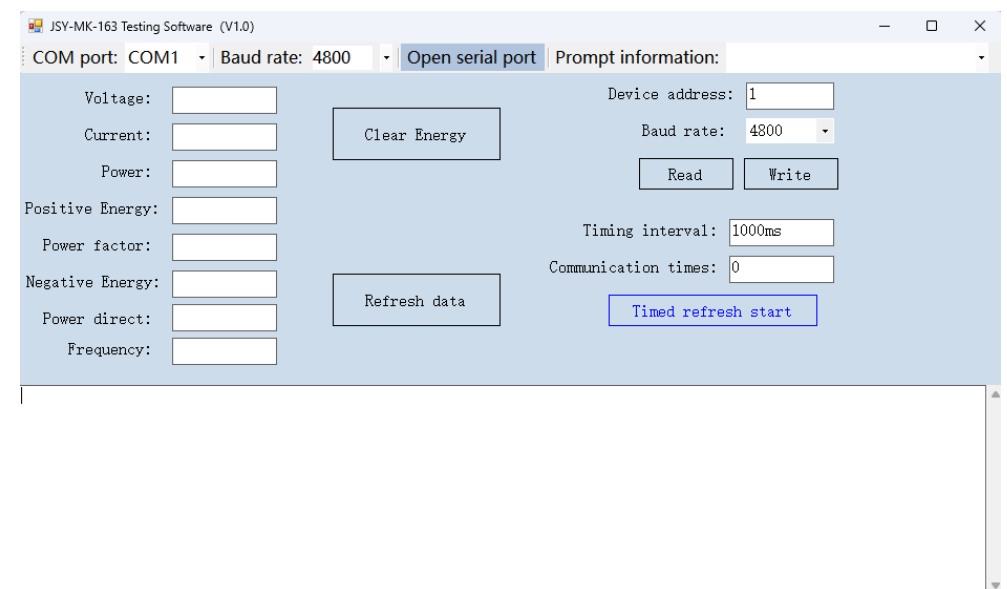

5. Safety Information

- 1) Pay attention to the auxiliary power information on the product label. Do not connect the wrong auxiliary power level and polarity of the product, otherwise the product may be damaged.
- 2) Please refer to the diagram for correct wiring according to product specifications and models. Make sure to disconnect all signal sources and power before wiring to avoid danger and damage to the equipment. After checking to confirm that the wiring is correct, turn on the power and test.
- 3) The voltage circuit or the secondary circuit of the PT must not be short-circuited.
- 4) When there is current on the primary side of the CT, it is strictly forbidden to open the secondary circuit of the CT. it is strictly forbidden to make live connections or unplug terminals.
- 5) When using the product in an environment with strong electromagnetic interference, please pay attention to the shielding of the input and output signal lines.
- 6) When installed in a centralized manner, the minimum installation interval should not be less than 10mm.
- 7) This series of products does not have a lightning protection circuit inside. When the input and output feeders of the module are exposed to harsh outdoor weather conditions, lightning protection measures should be taken.
- 8) Please do not damage or modify the product's label or logo, and do not disassemble or modify the product, otherwise our company will no longer provide "three guarantees" (guaranteed replacement, guaranteed return, and guaranteed repair) service for the product.

Manufacturer: Shenzhen Jiansiyan Technologies Co., Ltd.

Online Technical Support Staff:

+86 18675534520(Mr.Jack)

+86 18665924579(Mr.Jimmy)

E-mail: jsy-mk@jsypowermeter.com

Web: www.jsypowermeter.com

Address: 901, Building 1, Taijiale Technology Industrial Park, Tongguan Road, Tianliao Community, Yutang Street,Guangming District,Shenzhen,Guangdong, 518132, China



official website